

Switching on

- ▷ Lock the vehicle.
The alarm system, passenger compartment monitoring system and inclination sensor are switched on.
- ▷ Please observe the chapter “UNLOCKING AND LOCKING FROM OUTSIDE” on Page 26.

Switching off

- ▷ Unlock the vehicle.
The alarm system, passenger compartment monitoring system and inclination sensor are switched off automatically.

Note on operation

If you unlock the vehicle with the key at the door lock, you must switch the ignition on (ignition lock position **1**) within 15 seconds of opening the door in order to prevent the alarm system from being triggered.



The rocker switch to switch off the inclination sensor and the passenger compartment monitoring system is located next to the driver's seat under the seat belt height adjustment.

Note on operation

You can also temporarily deactivate the passenger compartment monitoring system and inclination sensor separately on the multi-purpose display in the instrument panel:

- ▷ Please observe the chapter “SWITCHING OFF PASSENGER COMPARTMENT MONITORING AND INCLINATION SENSOR ON THE MULTI-PURPOSE DISPLAY” on Page 165.

Temporarily deactivating passenger compartment monitoring system and inclination sensor

If people or animals are remaining in the locked vehicle or the vehicle is being transported on a passenger train or ship, for example, the passenger compartment monitoring system and inclination sensor must be deactivated.

When locked again, the passenger compartment monitoring and inclination sensor are activated again.



Deactivating passenger compartment monitoring system and inclination sensor

1. Apply the parking brake.
2. Remove ignition key.
On vehicles **with** Porsche Entry & Drive:
Switch off the ignition.
3. Open the driver's door.
4. Press the rocker switch.
The rocker switch symbol lights permanently.
5. Lock the vehicle.

Emergency flasher flashes **twice and an acoustic signal will sound twice.**

The vehicle doors, the rear lid and the rear window are locked but the doors can be opened from the inside by pulling the inner door handle twice.

- ▷ Inform any persons remaining in the vehicle that the alarm system will be triggered if the door is opened.

Note on operation:

If the ignition is switched on after pressing the rocker switch, the passenger compartment monitoring system and the inclination sensor are activated again. The symbol on the rocker switch will flash.

Activating the alarm system, the passenger compartment monitoring system and inclination sensor

- ▷ Unlock the vehicle and lock it again.

Fault indication

If the monitoring system and the inclination sensor could not be deactivated the symbol on the rocker switch will flash (e.g. the rocker switch is pressed with the ignition on).

For deactivating the passenger compartment monitoring and inclination sensor:

- ▷ Switch off ignition.
- ▷ Press the rocker switch.
- ▷ Lock the vehicle.