

Fault code 56

Passenger's side airbag sensor

Diagnostic conditions

- Ignition on

Possible cause of fault

- ◆ Wrong passenger's airbag sensor is installed

Affected terminals

Terminals 5, 6 and 21

Diagnosis/troubleshooting

Work instruction	Display OK	If not OK
1 ◆ Replace passenger's airbag sensor	→ End	