

Headlights



Caution!

Risk of damage to headlights due to abrasion and excessive temperatures.

- f Do not fix any coverings (e.g. "stone guards" or films) in the area of the headlights.

Note


The headlights can mist up depending on the temperature and humidity.

- f To ensure optimum ventilation, do not cover the gap between headlight and body (e.g. "stone guards" or films).




Removing headlights

1. Unscrew plastic nut **A**.
Detach the side carpeting.

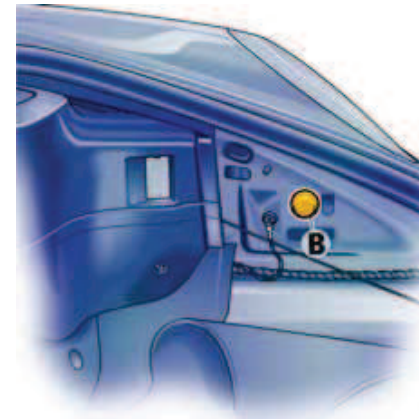


2. Remove rubber plug **B** from the unlocking opening.

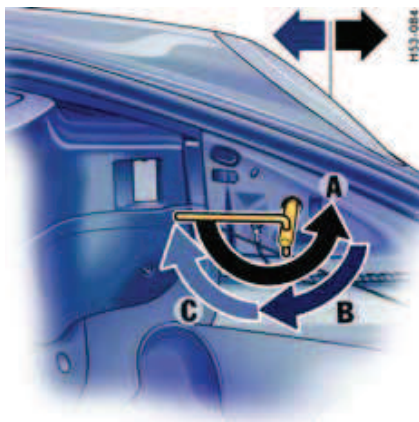

Installing

1. Insert headlight into the guide rails and push fully into the wing.
2. Push headlight to the rear and at the same time turn the socket wrench until it points horizontally to the rear **C**. The headlight locking device must perceptibly and audibly engage.
3. Insert the rubber plug into the unlocking opening and secure the carpet. Check the function of all lights.

3. Place socket wrench (tool kit) on the unlocking spindle.
The handle of the wrench should point horizontally to the rear.
4. Turn socket wrench approx. 180° **A**. The headlight is unlocked and pushed forward slightly during this process.
5. Turn socket wrench back until it is pointing vertically downward **B** and leave in position.
6. The headlight is now unlocked and can be pulled forward out of the wing.

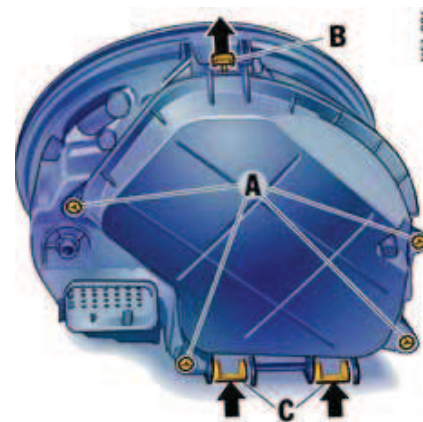

Low beam, high beam and additional high beam

Opening the lid of the headlight housing


1. Unscrew the 4 screws **A**.
2. First lift release tab **B**, then push both release tabs **C** upwards and take off lid.



1131-0921

Halogen headlights
Changing bulb for low beam


1. Pull off plug **A**.
2. Disengage fixing loop **B**.
3. Replace defective bulb.
When doing so, ensure bulb is seated properly.
4. Reassemble in reverse order.

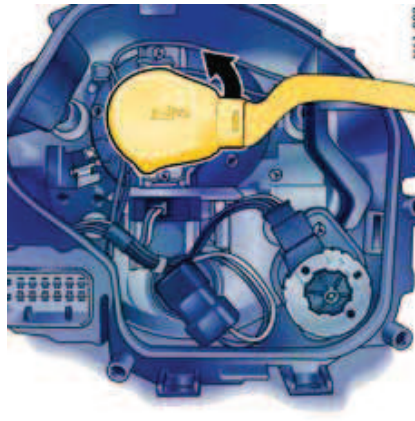

1161-0972


Bi-Xenon headlight
Changing bulb for low beam and high beam

1. Turn the plug counter-clockwise (bayonet lock) and pull it off.

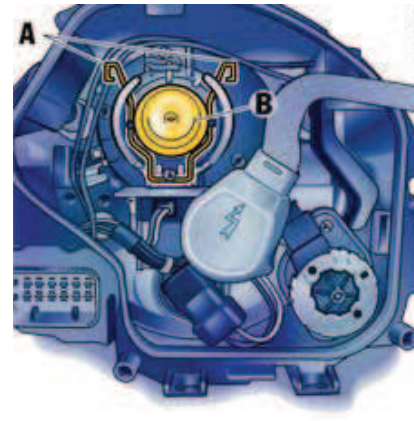


1161-0973

2. Disengage both fixing loops **A**.
3. Replace defective bulb **B**.
When doing so, ensure bulb is seated properly.
4. Engage both fixing loops **A**, push on plug and turn right as far as the stop.

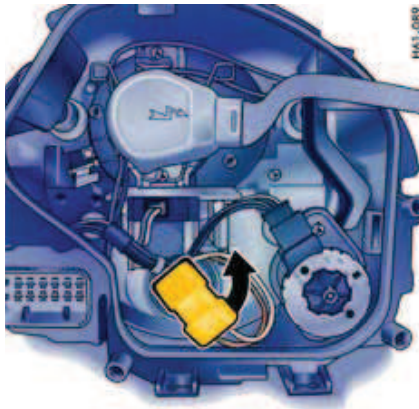

Changing bulb for high beam or additional high beam (Bi-Xenon headlight)

1. Turn the bulb holder.
Turn it counter-clockwise on the left headlight and clockwise on the right headlight.
Take bulb holder out of the headlight housing.

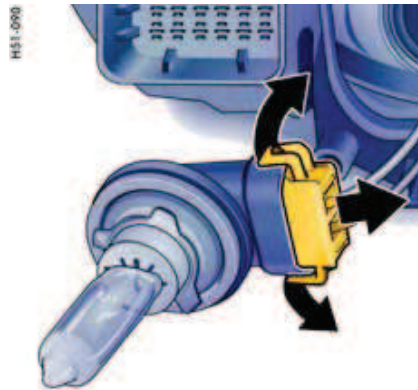

2. Pull both plug release tabs apart.
Pull plug out of the bulb holder.
3. Replace the defective bulb with bulb holder.
4. Reassemble in reverse order.

Closing lid of headlight housing

1. Push on lid until it perceptibly engages.
2. Fasten lid with the 4 screws.