


M – Manual selection mode

The currently selected gear is retained when you change from **D** to **M**.

If you change from **M** to **D**, the gear-changing map suitable for your current driving style is selected and the appropriate gear is selected.

The selector lever and the two shift buttons in the upper steering-wheel spokes or the two shift paddles allow you to comfortably and reliably select the seven forward gears.

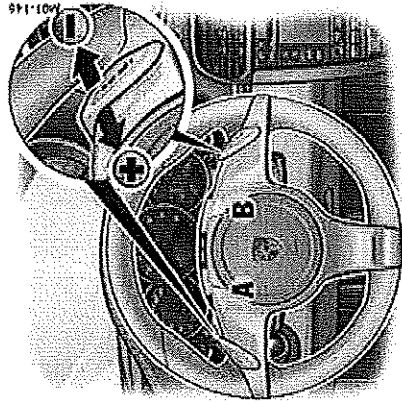

Shift buttons


- A - Sport/Sport Plus display
- B - Launch Control display

+ Shifting up using selector lever or shift buttons

- f Press PDK selector lever or shift button on the steering wheel **forward**.

- Shifting down using selector lever or shift buttons

- f Pull PDK selector lever or shift button on the steering wheel **back**.

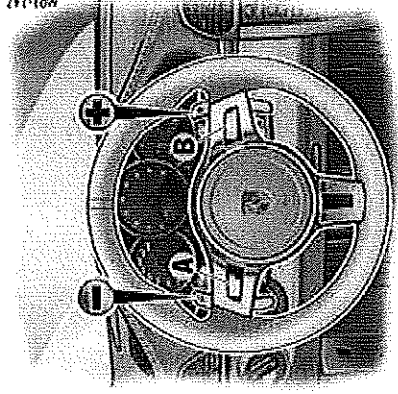

+ Shift up shift paddle

- Shift down shift paddle
- A - Sport/Sport Plus display
- B - Launch Control display

Shifting up using selector lever or right + shift paddle

- f Pull PDK selector lever forward or push right shift paddle on the steering wheel **back**.

Shifting down using selector lever or left - shift paddle

- f Pull PDK selector lever or left shift paddle on the steering wheel **back**.