


FUSES	VALUE
LEFT BROWN	5.0 A
BROWN	7.5 A
BLUE	15 A
WHITE	25 A
GREEN	30 A
RED	40 A

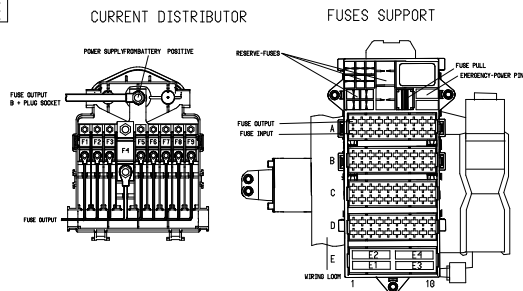

FUSE HOLDER A

NO.	VALUE	1-NO.
ET 01	25 A	CU DOOR LEFT POWER WINDOW
ET 02	15 A	CU DOOR LEFT CENTRAL LOCKING SYSTEM
ET 03	15 A	CU REAR WINDOW WIPER/WASHER THERMOSTAT (WASHING/TIME CONTROL)
ET 04	20 A	CU DOOR RIGHT POWER WINDOW
ET 05	15 A	CU DOOR RIGHT CENTRAL LOCKING SYSTEM
ET 06	15 A	CU REAR LEFT "REAR LIGHT" / STOP LIGHT / REAR FOG LIGHT
ET 07	15 A	CU REAR RIGHT "REAR LIGHT" / STOP LIGHT / REAR FOG LIGHT
ET 08	15 A	CU FUSE SOCKET 2 / PLUG SOCKET PASSENGER TRAY
ET 09	15 A	RESERVED
ET 10	15 A	CU LIGHT SWITCH IN ENGINE COMPARTMENT

FUSE HOLDER B

NO.	VALUE	1-NO.
ET 11	15 A	CU LIGHTER BURNER PLUG/ROCKET / CU LIGHT RESISTOR / IGNITION LOCK
ET 12	15 A	20 AMPERES FUSE
ET 13	15 A	COMMONED STOPPING COLUMN / CU HORN / CU BEAT ELECTRONIC
ET 14	15 A	ALARM BELL / STOPWATCH / TAIL BELL / CU HORN
ET 15	25 A	HEADLIGHT CLEARANCE RELAY
ET 16	15 A	RESERVED
ET 17	15 A	CU ON BOARD COMP. NETWORK ACTIVATOR TANK COVER
ET 18	15 A	RESERVED
ET 19	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 20	25 A	HEATER / CU PATRONAGE

FUSE HOLDER C

NO.	VALUE	1-NO.
ET 21	15 A	CU FUSE
ET 22	15 A	BURNER PLUG SOCKET / CU LIGHTER / "HEATED" "WASH" AT
ET 23	15 A	COMMON STOPPING COLUMN / CU HORN / CU BEAT ELECTRONIC
ET 24	15 A	ALARM BELL / STOPWATCH / TAIL BELL / CU HORN
ET 25	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 26	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 27	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 28	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 29	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE
ET 30	15 A	CU TELEPHONE SWITCH LIFTING TELEPHONE

FUSE HOLDER D

NO.	VALUE	1-NO.
ET 31	25 A	FUEL PUMP RELAY 1
ET 32	25 A	FUEL PUMP 2 RELAY
ET 33	15 A	FUSE
ET 34	15 A	FUSE
ET 35	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL
ET 36	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL
ET 37	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL
ET 38	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL
ET 39	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL
ET 40	15 A	CU HORN / HORN POSITIONER / HORN PUMP CONTROL

FUSE HOLDER E

NO.	VALUE	1-NO.
ET 41	15 A	POWER BEAT LEFT / BEAT HORN LEFT
ET 42	15 A	POWER BEAT RIGHT / BEAT HORN RIGHT
ET 43	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 44	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 45	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 46	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 47	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 48	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 49	15 A	BEAT HORN LEFT / BEAT HORN RIGHT
ET 50	15 A	BEAT HORN LEFT / BEAT HORN RIGHT

FUSES SUPPORT REAR

NO.	VALUE	1-NO.
ET 51	15 A	ENGINE COMPARTMENT CLEANER FAN
ET 52	15 A	RESERVED
ET 53	15 A	RESERVED
ET 54	15 A	RESERVED
ET 55	15 A	RESERVED
ET 56	15 A	RESERVED
ET 57	15 A	RESERVED
ET 58	15 A	RESERVED
ET 59	15 A	RESERVED
ET 60	15 A	RESERVED

CURRENT DISTRIBUTOR

NO.	VALUE	1-NO.
ET 61	15 A	FUEL PUMP RELAY 1 - F5
ET 62	15 A	FUEL PUMP RELAY 2 - F6
ET 63	15 A	FUEL PUMP RELAY 3 - F7
ET 64	15 A	FUEL PUMP RELAY 4 - F8
ET 65	15 A	FUEL PUMP RELAY 5 - F9
ET 66	15 A	FUEL PUMP RELAY 6 - F10
ET 67	15 A	FUEL PUMP RELAY 7 - F11
ET 68	15 A	FUEL PUMP RELAY 8 - F12
ET 69	15 A	FUEL PUMP RELAY 9 - F13
ET 70	15 A	FUEL PUMP RELAY 10 - F14
ET 71	15 A	FUEL PUMP RELAY 11 - F15
ET 72	15 A	FUEL PUMP RELAY 12 - F16
ET 73	15 A	FUEL PUMP RELAY 13 - F17
ET 74	15 A	FUEL PUMP RELAY 14 - F18
ET 75	15 A	FUEL PUMP RELAY 15 - F19
ET 76	15 A	FUEL PUMP RELAY 16 - F20
ET 77	15 A	FUEL PUMP RELAY 17 - F21
ET 78	15 A	FUEL PUMP RELAY 18 - F22
ET 79	15 A	FUEL PUMP RELAY 19 - F23
ET 80	15 A	FUEL PUMP RELAY 20 - F24

FUSES SUPPORT IN LUGGAGE COMPARTMENT RIGHT

NO.	VALUE	1-NO.
ET 81	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY

MODEL 2007 SHEET 31 FUSE CONNECTION

NO.	VALUE	1-NO.
ET 82	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 83	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 84	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 85	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 86	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 87	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 88	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 89	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 90	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 91	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 92	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 93	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 94	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 95	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 96	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 97	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 98	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 99	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY
ET 100	15 A	CU CHARGING WATER BURNER / BURNER FAN / BURNER FAN RELAY