

2011 Recommended Service Maintenance Quick Reference List – Panamera/4/S/4S & Turbo (2011)

	Miles								or	Years			
Use applicable Maintenance Sheets to perform actual maintenance. Oil Change Service Sheet (Every 10,000 mile) – P/N PNA 000 162 KC Note: If the mileage for scheduled "oil change" is not reached, oil change must be performed every year. Intermediate Maintenance Sheet (Every 20,000 mile) – P/N PNA 000 162 KD Note: If the mileage for scheduled "intermediate maintenance" is not reached, intermediate maintenance must be performed no later than after 2, 6, 10..... years. Maintenance Sheet (Every 40,000 mile) – P/N PNA 000 162 KE Note: If the mileage for scheduled "maintenance" is not reached, maintenance must be performed no later than after 4, 8, 12..... years.	Every 10,000	Every 20,000	Every 30,000	Every 40,000	Every 50,000	Every 60,000	Every 70,000	Every 80,000	Every 90,000	Every 1	After 2, 6, 10, 14.....	After 4, 8, 12, 16.....	4 & 8 (then every 2 yrs.)
Diagnosis system: Read out fault memory; reset maintenance interval		✓		✓		✓		✓		✓		✓	
Change engine oil and oil filter	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
Underside of vehicle & engine compartment: Visual inspection for damage & leaks				✓				✓				✓	
Underbody covers: Visual inspection, check that all are securely fastened				✓				✓				✓	
PDCC: Check fluid level		✓		✓		✓		✓			✓	✓	
Pollen filter: Replace filter element		✓		✓		✓		✓			✓	✓	
Steering gear: Visual inspection of the dust boots for signs of damage				✓				✓				✓	
Tie rod ends: Check play and dust boots				✓				✓				✓	
Power steering: Check fluid level		✓		✓		✓		✓				✓	
Fuel system lines and connections: Visual inspection				✓				✓				✓	
Coolant hoses: Check condition		✓		✓		✓		✓			✓	✓	
Radiators and air intakes: Visual inspection for exterior debris and blockage		✓		✓		✓		✓			✓	✓	
Coolant: Check level and antifreeze protection levels		✓		✓		✓		✓			✓	✓	
Brake system: Visual inspection of the brake pads and brake discs		✓		✓		✓		✓			✓	✓	
Brake hoses and lines: Visual inspection for damage, correct routing and corrosion		✓		✓		✓		✓			✓	✓	
Axle joints: Check play; visual inspection of the dust boots for signs of damage				✓				✓				✓	
Drive shafts: Visual inspection of the sleeves		✓		✓		✓		✓			✓	✓	
Exhaust system: Visual inspection for leaks & damage, check mounting & heat shields				✓				✓				✓	
Tires: Check condition and tire pressure		✓		✓		✓		✓			✓	✓	
Check firewall body drains and sunroof drains for debris		✓		✓		✓		✓			✓	✓	
Windshield wiper/washer system, headlight washer		✓		✓		✓		✓			✓	✓	
Check wiper blades		✓		✓		✓		✓			✓	✓	
Seat belts: Check operation and condition				✓				✓				✓	
Vehicle lighting: Check operation		✓		✓		✓		✓			✓	✓	
All headlights: Check adjustment		✓		✓		✓		✓			✓	✓	
Horn: Check operation		✓		✓		✓		✓			✓	✓	
Battery ventilation hoses: Check condition		✓		✓		✓		✓			✓	✓	
Trailer hitch: Check operation				✓				✓				✓	
Clean reversing camera lense		✓		✓		✓		✓			✓	✓	
Additional Maintenance													
Change brake fluid (use only Genuine Porsche Brake fluid)	Every 2 Years												
Replace tire sealant	Every 4 Years												
Replace spark plugs - Panamera Turbo	Every 30,000 Miles or 4 Years												
Replace spark plugs - Panamera/4/S/4S	Every 40,000 Miles or 4 Years												
PDCC: Replace reservoir	Every 60,000 Miles or 6 Years												
PDK transmission: Change oil	Every 60,000 Miles or 6 Years												
Replace air filter	Every 80,000 Miles or 4 Years (More often if used in dusty environments)												
Change front differential oil - Panamera 4/4S/Turbo	Every 120,000 Miles or 12 Years												
Change rear differential oil	Every 120,000 Miles or 12 Years												