


The present document was valid at the time of print. A later version may be available online

WM 663319 Removing and installing roof moulding


Removing roof moulding

Removing roof moulding

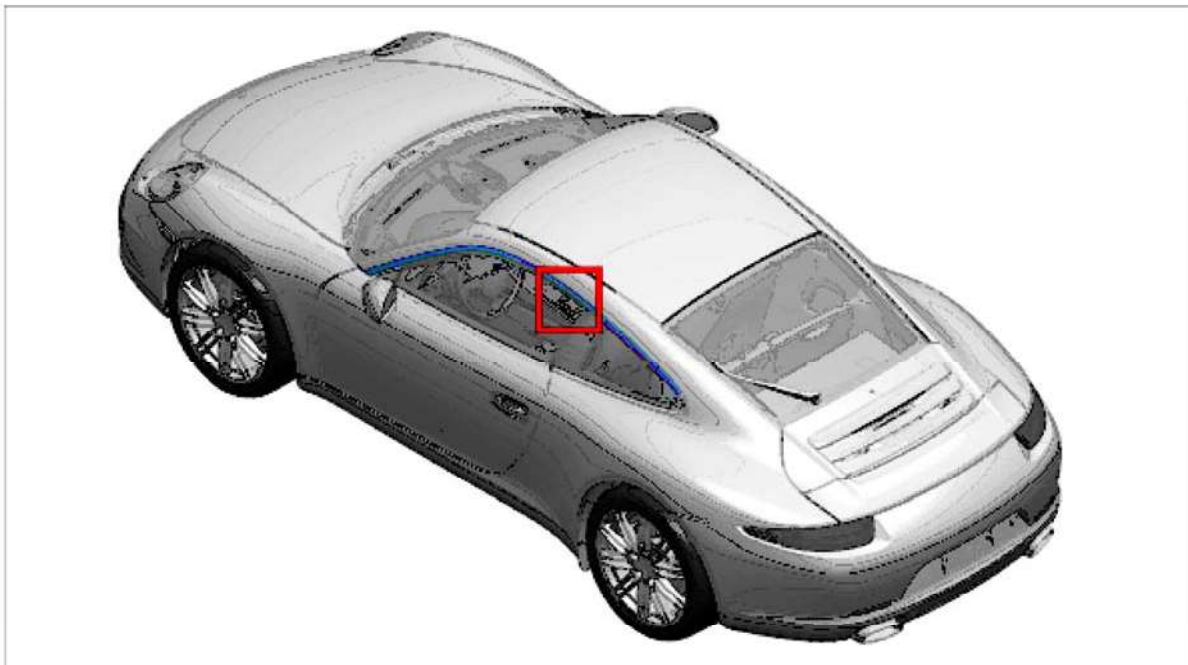


Installation position of roof moulding

1. Pull rubber door seal **-1-** out of the body close to the roof moulding **-arrows-** .

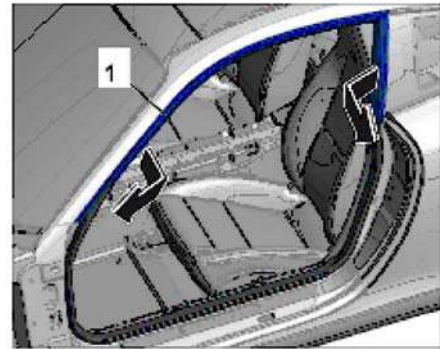


Loosening rubber seal

2. Turn the fastening clip **-1-** along the roof moulding **-2-** by 90° using a Torx wrench **-arrow-** .

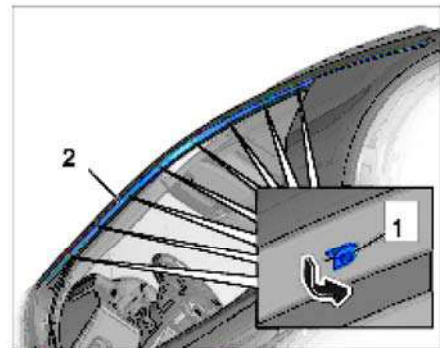


Detaching roof moulding

3. Remove roof moulding.

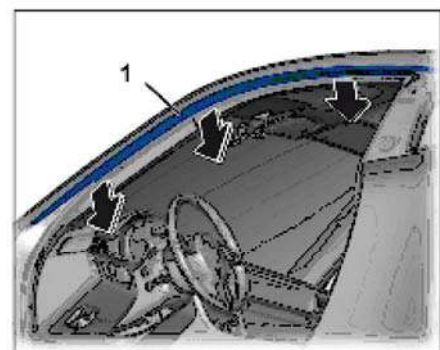

Removing roof moulding

- 3.1. Starting at the front, pull the roof moulding **-1-** down as far as the B-pillar **-arrows-** . Insert a plastic wedge between the roof moulding and body if necessary.
- 3.2. Pull the roof moulding **-1-** out of the fixing clips **-2-** close to the side window **-arrow A-** .

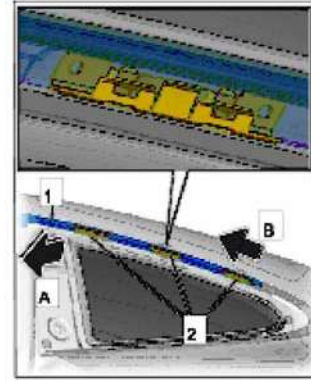

Removing roof moulding

- 3.3. Pull the roof moulding **-1-** forward and remove it **-arrow B-** .

Installing roof moulding

Installing roof moulding

1. The roof moulding is installed in reverse order to removal.

991110, 991111, 991120, 991121, 991410, 991411, 991420, 991421, 991430, 991431, 991810, 991811, 991830

Model year as of 2012

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C46, C96, C97, C98, C99