


*Installation position of B-pillar trim panel*


1. Remove belt collar.
  - 1.1. Unclip belt collar **-1-** from the trim panel **-2-** ( **-arrow-** ).

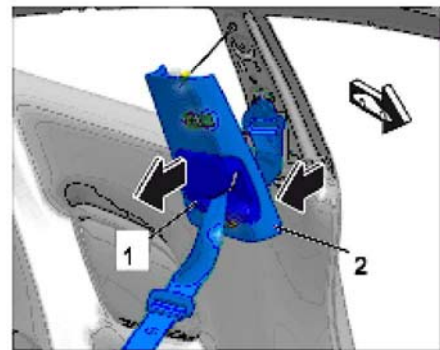

*Unclipping belt collar*

2. Release unlocking bracket on the clamps.

- 2.1. Release clamp using **assembly tool T10118** and remove the trim panel by pulling it forward **-arrow-** .

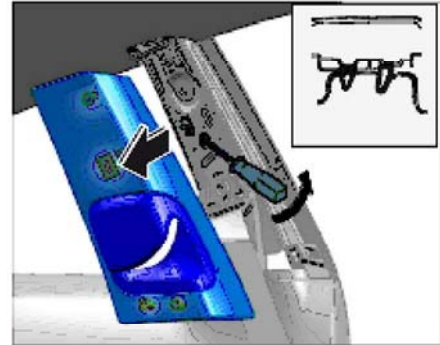

*Releasing unlocking bracket on clamps*

3. Guide the seat belt and seat belt mount out through the trim panel and remove trim panel.
4. Check fastening clamps for damage and replace if necessary.

## Installing B-pillar trim panel

### Installing B-pillar trim panel



#### Information

Make sure that the linings and trims are seated accurately.

Installation is performed in reverse order to removal.

## Subsequent work

### Subsequent work

1. Secure three-point seat belt at the bottom. → *691119 Removing and installing front three-point belt*

991110, 991111, 991120, 991121, 991130, 991131, 991410, 991411, 991420, 991421, 991430, 991431, 991450, 991451, 991810, 991811

Model year as of 2012

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C46, C96, C97, C98, C99