

R83-053



- A - Adjustment button for clock
- B - Clock
- C - Outside temperature display

Clock

The **clock** is blanked out approximately four minutes after the ignition is switched off or when the car is locked.

Setting the time



Warning!

Risk of loss of control or accident, resulting in serious personal injury or death.

- ▷ Do not reach through the steering-wheel spokes while driving.

- ▷ Switch ignition on.

Setting hours

- ▷ Press adjustment button **A** for about one second.
- ▷ Hour display flashes.
- ▷ Turn button in the appropriate direction:
 - to right – increase hours figure
 - to left – decrease hours figure.

Adjustment in hours – turn button briefly
Fast adjustment (display cycles) – turn and hold button.

Setting minutes

- ▷ Press adjustment button again.
- ▷ Minutes display flashes.
- ▷ Set by rotating as in hours mode.

Leaving adjustment mode

Automatically after one minute **or**:

- ▷ Press adjustment button again.

When adjustment mode is deliberately left by pressing the button, the time begins precisely to the second.

Note

The time mode can be changed between 12h and 24h in the on-board computer.

Outside Temperature

The outside temperature display **C** does not indicate, if ice is on the road. Even if a temperature above 32 °F (0 °C) is displayed, ice may still form on the road, for instance on bridges or when the road passes through a heavily shaded area.