



**Caution!**

**Risk of damage.**

- f Do not store any objects behind the access cover **A**.

**Tire sealant**

The tire sealant is located behind the access cover **B**.

- f Open access cover **B** using the opening.

**Tools**

The tools are located under the floor plate of the luggage compartment.

- f Lift the floor plate on the opening and take out.

H63-226



**Luggage Compartment (911 Carrera 4, 911 Carrera 4S)**

The position of the components in the luggage compartment are dependent on the country equipment and can vary from what is shown in this manual.

**DVD navigation**

The drive for DVD navigation and the audio amplifier are on the rear wall of the luggage compartment.

H61-227



- B** - Access cover for tire sealant
- C** - Tire filling compressor
- D** - Tool kit
- E** - Towing lug
- F** - Adapter for security wheel bolts