


Lowering Engine

Jack up, or lift car

Jack car, support engine, loosen and remove the two 18 mm Nuts from engine mounts, lower engine

Support engine with Jack or adjustable stand

One 18mm Nut on each side (Mount)

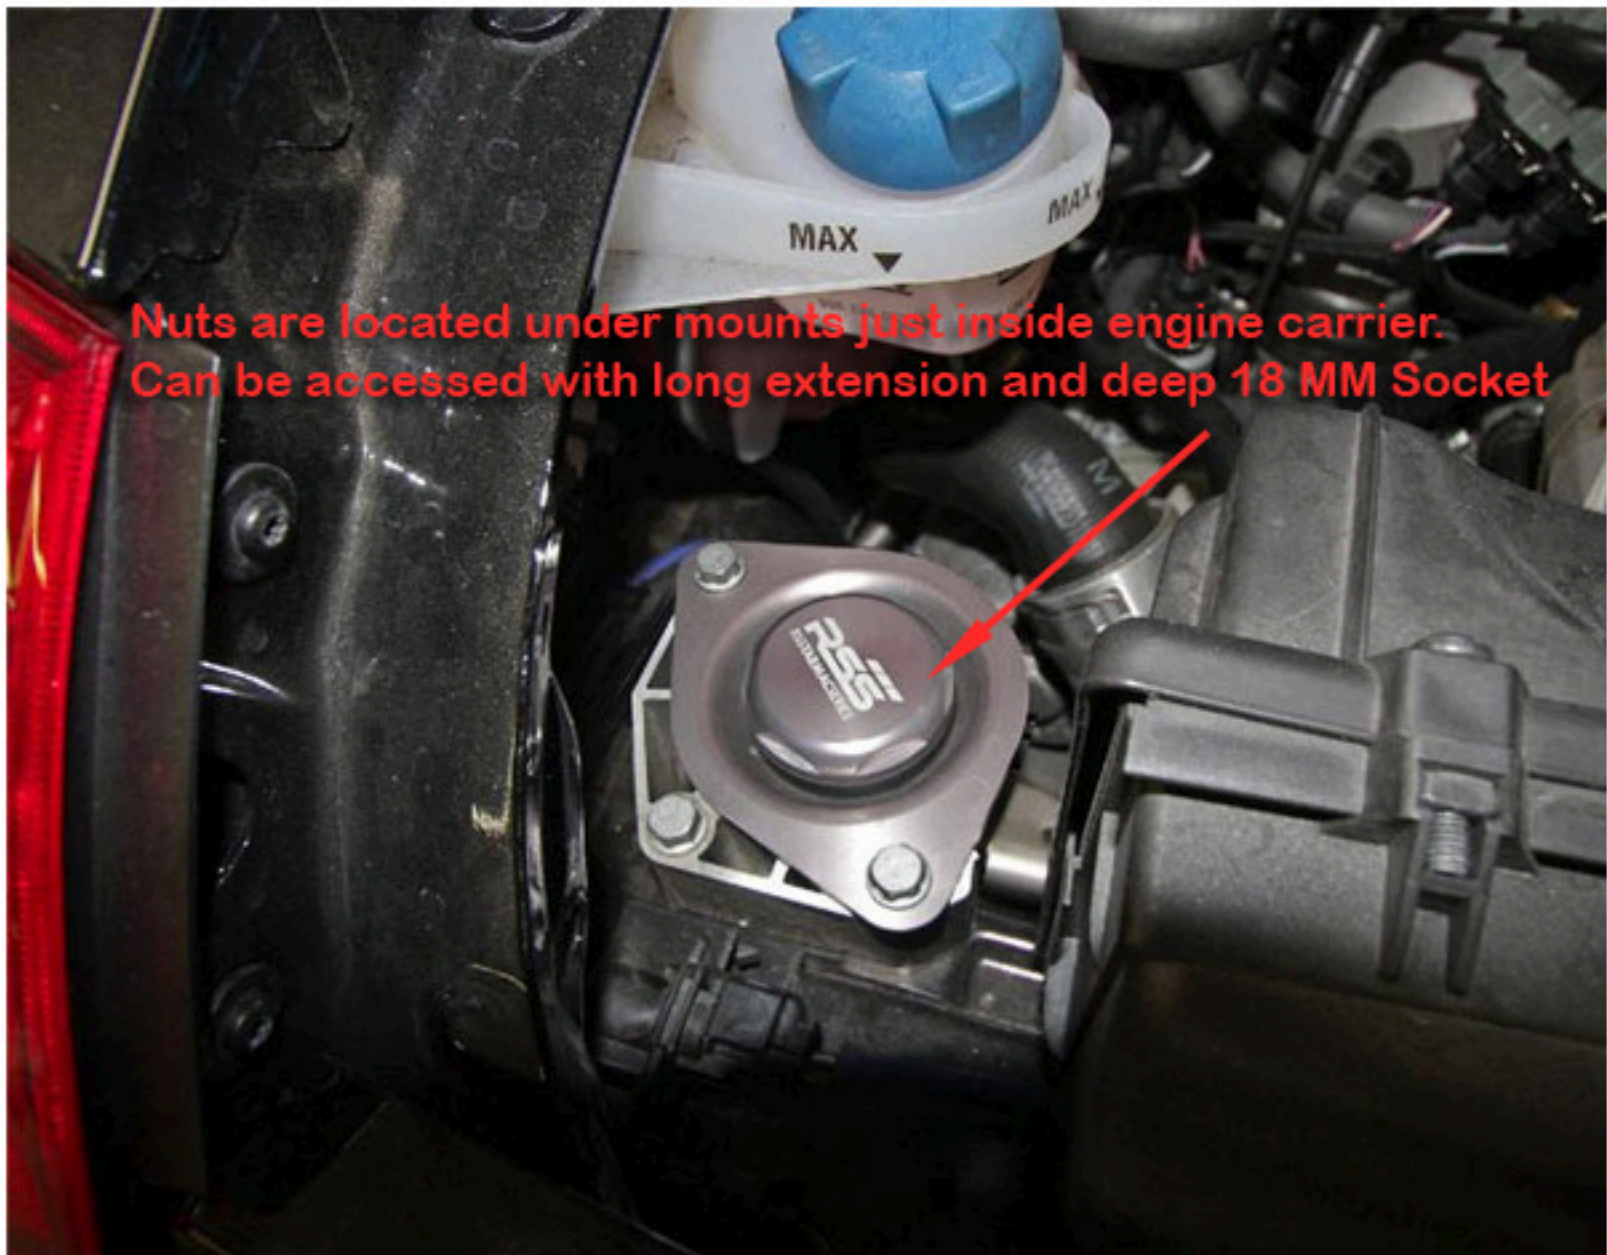

Nuts are located under mounts just inside engine carrier.
Can be accessed with long extension and deep 18 MM Socket