


H61-102

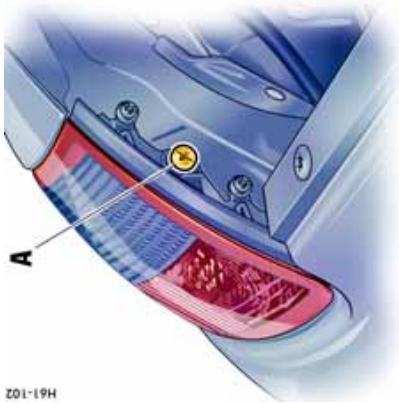


Tail Light

Changing bulb

1. Open the engine compartment lid.
2. Completely unscrew fastening screw **A**.
3. Pull tail light out towards the back.

H51-103

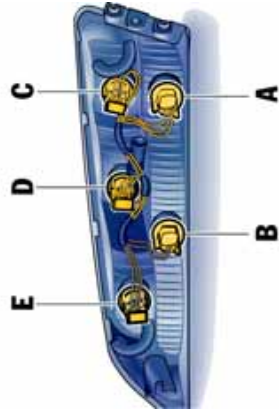

- A - Reversing light
- B - Turn signal
- C - Tail light/brake light
- D - Tail light/reflector
- E - Rear fog light/Side marker light

4. Turn the bulb holder in the tail light housing counter-clockwise and pull it out.
5. Turn the defective bulb counter-clockwise (bayonet lock) and replace it.
6. Insert the bulb holder and turn it clockwise.

H51-104



7. Insert tail light into the side section. Ensure that the retaining lug has been inserted into the mounting guide properly.
8. Tighten fastening screw **A** on the tail light.
9. Check operation of the light.