



Platform lift

Before the car is driven on to a lifting platform, it must be ensured that there is enough space between the lifting platform and the vehicle.

Garage lift

A garage lift must be used only at the illustrated jacking points.

A - Front jacking point

Lifting the Vehicle with a Lifting Platform or Garage Lift

The car must be raised only at the illustrated jacking points.

B - Rear jacking point

⚠ Caution!

Serious injury and/or serious damage to the engine or the vehicle may occur, if you lift the vehicle improperly.

- f Never lift the vehicle at any other place than the jacking points.
- f Never lift the vehicle by the engine, transmission or axles.
- f Do not damage any sensitive components in the vicinity of the jacking points.