

Service schedules

| Item | Procedure description | Comment |
|---|--|--|
| 10 Years 100,000 miles 160,000 kilometres | | |
| VIN | SCB | |
| Date | | |
| 01 | Check the vehicle diagnostic system for stored information (refer to topic: 10289_2_1_1.htm) | |
| 03 | Check the tyre pressure sensor batteries (refer to topic: 13991_1_1_1.htm) | Only for 2004/2005 Model Year vehicles |
| VEHICLE RAISED | | |
| 05 | Remove the front screening panels (refer to topic: 10841_2_1_1.htm) | |
| 10 | Drain the engine oil (refer to topic: 10564_7_1_1.htm) | |
| 15 | Drain the transmission oil (refer to topic: 14158_8_1_1.htm) | Only for 2004 - 2009 Model Year vehicles |
| 20 | Check the power steering system for leaks and condition (refer to topic: 13985_2_1_1.htm) | |
| 25 | Check the condition, position and mounting of the exhaust system (refer to topic: 13984_1_1_1.htm) | |
| 30 | Check the braking system for leaks, damage and position (refer to topic: 13989_1_1_1.htm) | |
| 35 | Check that all body drains are free from obstruction, correct as necessary (2-door cars) (refer to topic: 14156_4_1_1.htm) | |
| | Check that all body drains are free from obstruction, correct as necessary (4-door cars) (refer to topic: 33781_3_1_1.htm) | |
| 40 | Check the condition of the engine, gearbox, suspension mounts for leaks and damage (refer to topic: 12977_1_1_1.htm) | |
| 45 | Renew the sump plug and oil filter (refer to topic: 10564_7_1_1.htm) | |
| 55 | Renew the leak detection pump filter (refer to topic: 10497_3_1_1.htm) | |
| 60 | Renew the main fuel filter (refer to topic: 10494_4_1_1.htm) | |
| 65 | Check the fuel system for leaks, damage and position (refer to topic: 14157_3_1_1.htm) | |
| 70 | Check the condition of the steering column universal joints, couplings and the steering rack flexible gaiters (refer to topic: 13985_2_1_1.htm) | |
| 75 | Check the condition of the track rod and front axle ball joints (refer to topic: 14479_1_1_1.htm) | |
| 80 | Check the condition of the drive-shaft gaiters (refer to topic: 14478_1_1_1.htm) | |
| 85 | Check the cooling system for leaks (refer to topic: 14155_1_1_1.htm) | |
| 90 | Refill the transmission oil (refer to topic: 14158_8_1_1.htm) | Only for 2004 - 2009 Model Year vehicles |
| 95 | Inspect the underside of the body for corrosion/underseal, damage, etc. (refer to topic: 30563_4_1_1.htm) | |
| 97 | Renew the secondary air injection (SAI) filters (refer to topic: 10470_1_1_1.htm) | |
| 100 | Fit the front screening panels (refer to topic: 10841_2_1_1.htm) | |
| VEHICLE AT HALF-WAY POSITION | | |
| 105 | Check the condition and tread depth of the tyres (refer to topic: 13987_4_1_1.htm) | |
| 110 | Remove the road wheels (refer to topic: 0_4_1_1.htm) | |
| 112 | Renew the secondary air injection (SAI) filters (refer to topic: 10470_1_1_1.htm) | |

| | | |
|-------------------|--|---|
| | 10470_1_1_1.htm | |
| 115 | Replace the tyre pressure sensor batteries (refer to topic: 6983_1_1_1.htm) | For 2004/2005 Model Year vehicles, replace if required. For 2006 Model Year onwards, replace regardless of condition. |
| 120 | Check the brake pads for wear (refer to topic: 7027_3_1_1.htm) | |
| 125 | Check the brake calipers and dust seals for leaks (refer to topic: 9315_2_1_1.htm) | |
| 130 | Check the condition of the brake discs (refer to topic: 9315_2_1_1.htm) | |
| 140 | Renew the brake fluid (refer to topic: 6991_1_1_1.htm) | |
| 145 | Check the air suspension for leaks and damage (refer to topic: 13990_1_1_1.htm) | |
| 150 | Remove foreign matter from all cooling matrices (refer to topic: 14787_3_1_1.htm) | |
| 155 | Refit the road wheels (refer to topic: 6980_3_1_1.htm) | |
| 160 | Check the tyre pressures and adjust as necessary (refer to topic: 13987_4_1_1.htm) | |
| VEHICLE ON GROUND | | |
| 165 | Refill the engine oil (refer to topic: 10564_7_1_1.htm) | |
| 172 | Replace the engine drive belt (refer to topic: 10622_3_1_1.htm) | |
| 175 | Check the coolant level and frost protection, specification -25°C (arctic climate - 35°C) Record the actual value °C (refer to topic: 14155_1_1_1.htm) | |
| 180 | Check the condition of pipes and hoses engine to body for chafing and constriction (refer to topic: 14481_1_1_1.htm) | |
| 185 | Replenish the windscreen washer reservoir (refer to topic: 9276_1_1_1.htm) | |
| 190 | Check the power steering system reservoir fluid level and top-up as necessary (refer to topic: 6860_1_1_1.htm) | |
| 195 | Check the brake fluid level and top-up as necessary (refer to topic: 13988_1_1_1.htm) | |
| 200 | Check the induction system for leaks, correct as necessary (refer to topic: 14480_1_1_1.htm) | |
| 210 | Replace the wiper blades and check jet aim on the windscreen (refer to topic: 9268_2_1_1.htm) | |
| 215 | Renew the dust and pollen filters (refer to topic: 11117_1_1_1.htm) | |
| 220 | Fit the plenum cover (refer to topic: 11118_1_1_1.htm) | |
| 225 | Renew the evaporative control carbon canister (refer to topic: 10496_2_1_1.htm) | |
| 230 | Check the condition of the batteries (refer to topic: 10297_3_1_1.htm) | |
| 235 | Check the condition and the tyre pressure of the spare wheel (refer to topic: 13987_4_1_1.htm) | |
| 240 | Check that there is a full 1 litre container of oil in the luggage compartment | |
| 255 | Renew the integrated key fob batteries (refer to topic: 30754_4_1_1.htm) | |
| 260 | Renew the park heater key fob batteries (if fitted) (refer to topic: 13033_1_1_1.htm) | |
| 265 | Check the operation of the centralised door locking and anti-theft alarm system (refer to topic: 13190_3_1_1.htm) | |
| 270 | Check the operation of the active rear aerofoil (2-door coupe) (refer to topic: 14159_2_1_1.htm) | |
| 275 | Check the condition and operation of all seat belts (refer to topic: 13185_1_1_1.htm) | |
| 280 | Check the condition and operation of all lights and horns | |
| 283 | Lubricate the glass sunroof/solar panel seal (refer to topic: 44786_1_1_1.htm) | |
| 290 | Check all facia warning lamps including engine fault indicator | |

| | | |
|-----|--|--|
| | for correct operation (refer to topic: 10302_4_1_1.htm) | |
| 295 | Check the steering system for freedom from play (refer to topic: 13985_2_1_1.htm) | |
| 297 | Check the operation of the roll-over protection system (ROPS) (refer to topic: 75729_3_1_1.htm) | |
| 300 | Check the vehicle diagnostic system for stored information (refer to topic: 10289_2_1_1.htm) | |
| 305 | Inspect the bodywork for corrosion, stone chips, damage or contamination. Indicate on chart. Correct as authorised by the Area Service Manager, Bentley Motors Limited (refer to topic: 30563_4_1_1.htm) | |
| 310 | Carry out a full functional check and road test the car for satisfactory performance and condition (refer to topic: 12975_3_1_1.htm) | |
| 315 | Carry out an exhaust emission test (First 3 years after initial registration then every 2 years) | |
| 317 | Check the vehicle diagnostic system for stored information (refer to topic: 10289_2_1_1.htm) | |
| 320 | Reset the service indicator light (refer to topic: 10303_4_1_1.htm) | |
| 325 | On completion of this service schedule complete the respective voucher contained in the service record (refer to topic: 12974_2_1_1.htm) | |