




Changing bulbs for parking light, turn signal light and fog light

The release card for the auxiliary headlights is inside the vehicle fender.

1. Insert release card at the side of the auxiliary headlight.
The auxiliary headlight is released by pushing in the card.
The card may have to be pushed again to release the second connection.



2. Remove auxiliary headlight.
Ensure that the vent hose D is not lost when the auxiliary headlight is pulled out.

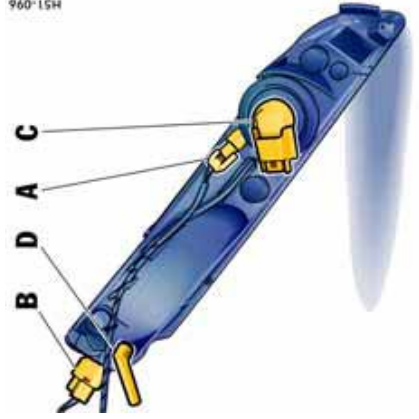

- A - Parking light
- B - Turn signal
- C - Fog light
- D - Vent hose