



M - Memory button  
 1 - Key button  
 2, 3 - Person buttons

## Seat Memory

Individual seat and door mirror settings can be stored and recalled for the driver's position.

Further individual setting options are available in vehicles with the Sport Chrono package. Please observe the chapter "Individual Memory" in the separate PCM operating instructions.

### Warning!

Risk of crushing due to uncontrolled recall of a seat setting.

- f Cancel automatic adjustment by pressing any of the seat adjustment buttons.
- f Do not leave children in the vehicle unattended.

### Operation with person buttons 2, 3

#### Storing seat position

1. Switch on ignition.  
Reverse gear must not be engaged.
2. Set the desired seat and door-mirror positions.
3. Keep memory button M depressed and additionally press person button 2 or 3.  
The individual setting is now stored under the desired person button.

#### Recalling seat position

1. Switch on the ignition or open the driver's door.
2. Press person button until the seat has reached its final position.  
The setting of door mirrors and lumbar support will be completed even if the person button is not kept depressed.

#### Note

Automatic seat adjustment can be interrupted immediately by releasing the button.

### Operating with the remote control of the vehicle key

Each remote control (up to six) can be assigned an individual seat and door mirror position. The stored seat and door mirror position is set automatically when the vehicle is unlocked using the corresponding remote control.

#### Storing seat position

1. Switch the ignition on with the desired vehicle key.  
Reverse gear must not be engaged.
2. Set the desired seat and door-mirror positions.
3. Keep memory button M depressed and additionally press key button 1.  
The individual setting is now assigned to this remote control and to the key button.

### Storing individual lowered position of the passenger's door mirror as a parking aid

Once the driver's seat setting has been stored, an individual lowered position of the passenger's door mirror may be stored for driving in reverse:

1. Apply the handbrake.
2. Switch the ignition on with the desired vehicle key.
3. Engage reverse gear.
4. Select passenger side with mirror switch.  
The passenger's mirror swivels downwards.
5. Set passenger's door mirror to desired final position.
6. Keep memory button M depressed and additionally press key button 1.  
The individual setting is now assigned to this remote control and to the key button.

### Recalling seat position

- f Unlock the locked vehicle or the luggage compartment with the remote control.  
The stored seat position is automatically set.

The seat position assigned to a remote control can also be recalled with the key button 1 if the corresponding key was used to switch on the ignition.

If no seat position has been assigned to a remote control, the key button will not work.

#### Note on operation

Automatic seat adjustment can be interrupted immediately:

- by switching on the ignition,
- by pressing the central locking button,
- by pressing any memory or seat adjustment button.

#### Clearing the stored seat position

1. Switch the ignition on with the desired vehicle key.
2. Press memory button twice and key button 1 once consecutively.