

Wheel Bolts




Warning!

Risk of wheel bolt breakage and wheel separation, resulting in severe personal injury or death.

- ▷ Follow all instructions concerning wheel bolts.

MI 094

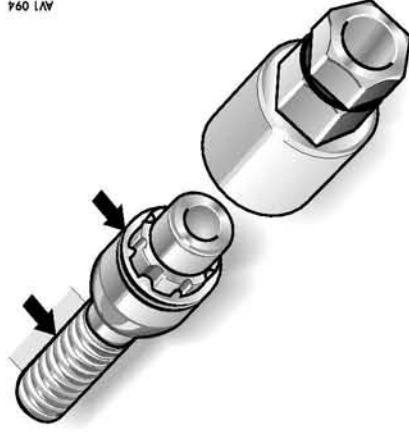

Note

On vehicles with 17 mm spacer rings on the rear axle, the wheels are secured with nuts.

Tightening torque

Tightening torque of wheel bolts and wheel nuts:
130 Nm.

Wheel Securing Bolts

The wrench socket for the wheel securing bolts is in the tool pocket.

To loosen or tighten the wheel bolt with anti-theft protection, a wrench socket with the appropriate coding must be used between the wheel bolt and the wheel-bolt spanner.

- ▷ Always clean the wheel bolts before fitting.
- ▷ Apply a thin coat of **Optimoly TA** (aluminium paste) on the thread and between the bolt head and movable spherical cap ring (arrows). **The bearing surface of the spherical cap facing the wheel must not be greased.**

▷ Replace damaged wheel bolts.
Only use the Original Porsche wheel bolts specially designed for this vehicle type.

- ▷ When positioning the wrench socket, ensure that it engages fully in the teeth of the wheel bolt.

If the wheels have to be removed at the workshop, please do not forget to hand over the wrench socket for the wheel securing bolts along with the car key.