


66 58 19 Removing and installing rear spoiler

Removing rear spoiler


Installing rear spoiler

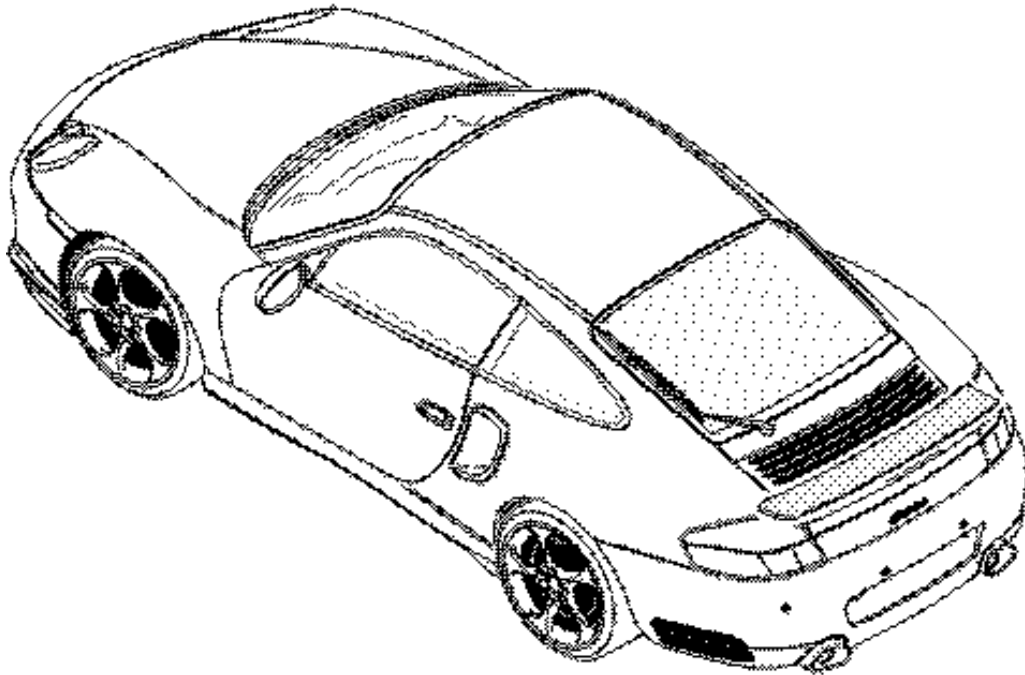

top of page

Removing rear spoiler

einordnung

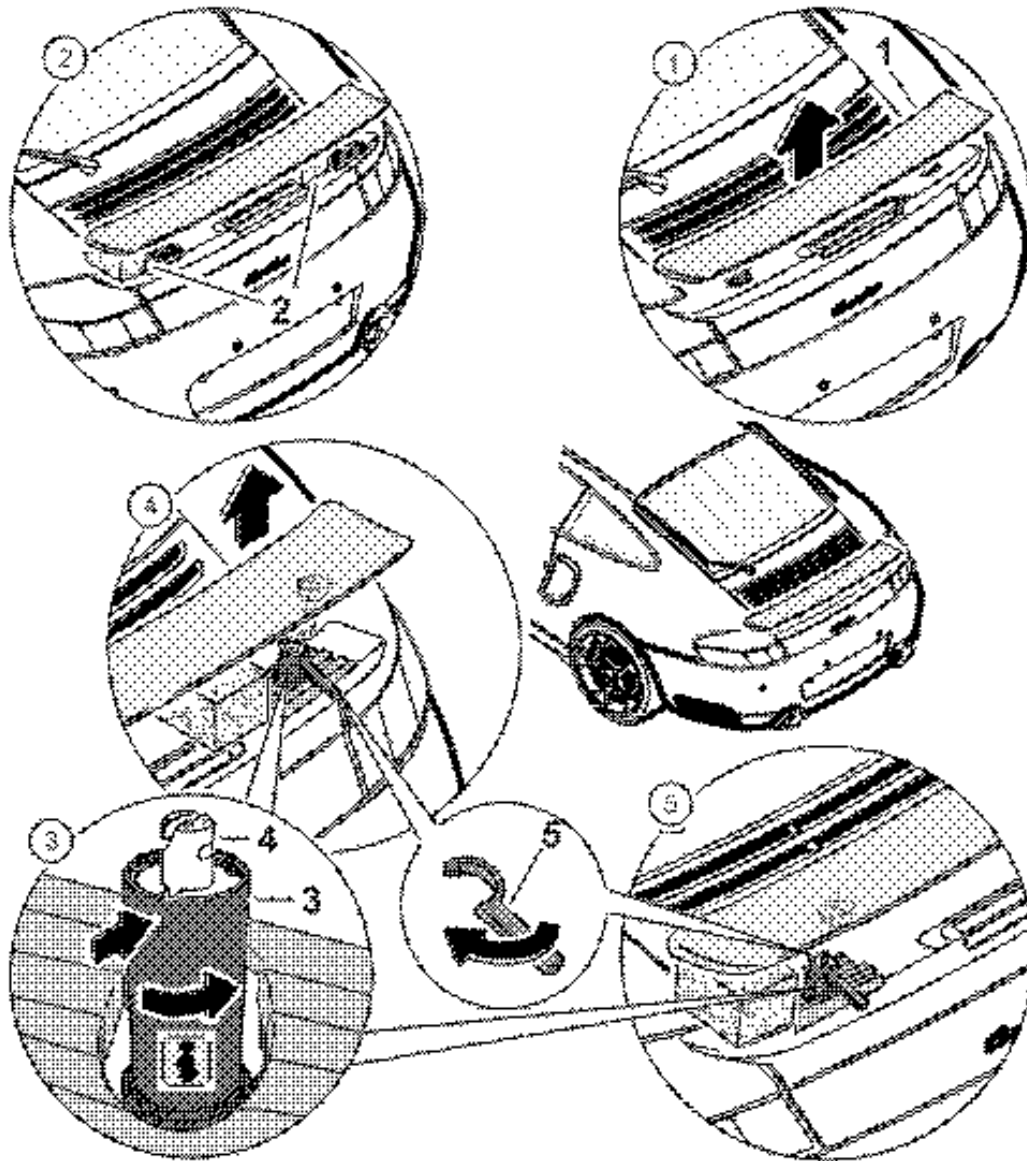

Note

- The spoiler can only be removed from the rear lid when the extension elements are extended. After retracting or extending three times with an obstacle, the control module detects the obstacle and switches off. The control module is reset by switching the ignition off and on. In order to remove the spoiler in the case of malfunctions in the drive module, lift the spoiler manually and support with support pads.



CAUTION

Damage will result if emergency release of the drive module is carried out incorrectly!

- Always make sure to observe the exact sequence for emergency release of the drive module!
- During emergency release, the extension element retracts suddenly!
- Wear gloves during emergency release.
- Before release, cover off the painted areas of the lid near the extension elements with adhesive tape in

einordnung

order to avoid paint damage.


- During emergency release, the spoiler must be held tightly by an assistant.

No.	Procedure	Instructions
1	Extend spoiler -1- (with drive module intact)	Extend spoiler manually using the rocker switch with the ignition switched on.
2	Lift up spoiler -1- (if drive module is faulty)	Pull spoiler upwards and push in two support pads -2- approx. 60 mm high on the right and left between the rear lid and the spoiler. Note: use suitable packaging material (e.g. styropore pad, cardboard) as a support pad. The support pads should only be pushed in to the positions shown in the figure.
3	Position outer tubes of the extension elements	Align the bore on the outer tube of the extension element -arrow- with the bore of the closure peg -4- by turning the outer tube -3- . The outer tube should be turned in an anti-clockwise direction only.
4	Unlock right extension element	Insert hook wrench ' No. 80/1, 2.4 Workshop Manual into the bores and turn clockwise by 90°.
5	Unlock left extension element	Insert hook wrench ' No. 80/1, 2.4 Workshop Manual into the bores and turn clockwise by 90°.
	Remove spoiler -1-	Lift the spoiler up and off.

[top of page](#)

Installing rear spoiler

einordnung

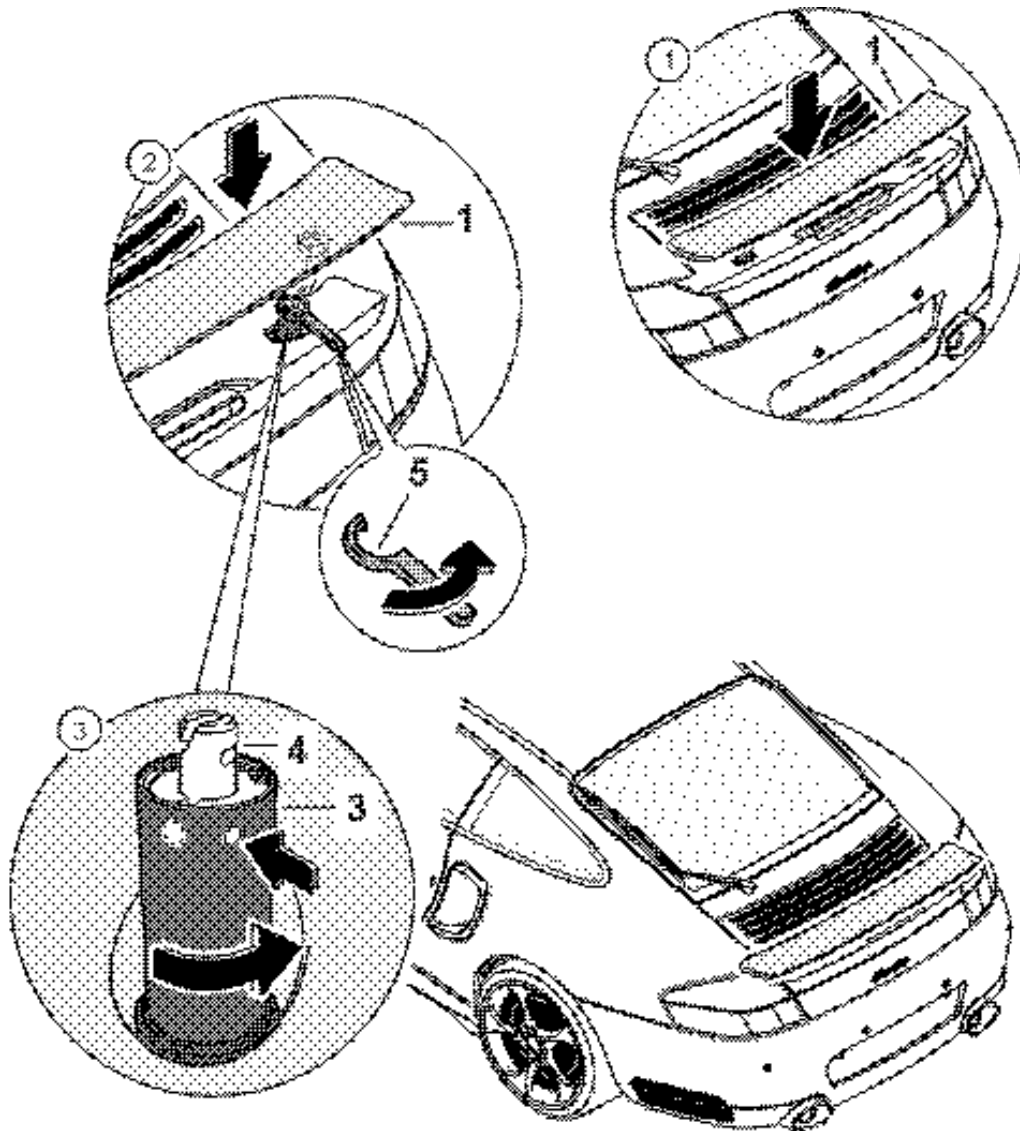

No.	Procedure	Instructions
1	Put on spoiler -1-	Put spoiler -1- on both extension elements.
2	Lock spoiler -1-	Insert hook wrench ' No. 80/1, 2.4 Workshop Manual into the bores and turn anti-clockwise until the closure peg engages in the lock of the spoiler, then turn anti-clockwise by a further 90° until the lock locks. Lock spoiler on both sides.
3	Cover bore of closure peg	Cover off bore of closure peg -4- by gently turning the outer tube -3- . Note: the outer tube -3- should be turned in an anti-clockwise direction only! The visible bores should lie in front in the direction of travel. The outer tube may need to be turned by a further 180°.
	Retract spoiler -1-	Retract spoiler manually using the rocker switch with the ignition switched on.

einordnung

996420, 996421, 996450, 996451