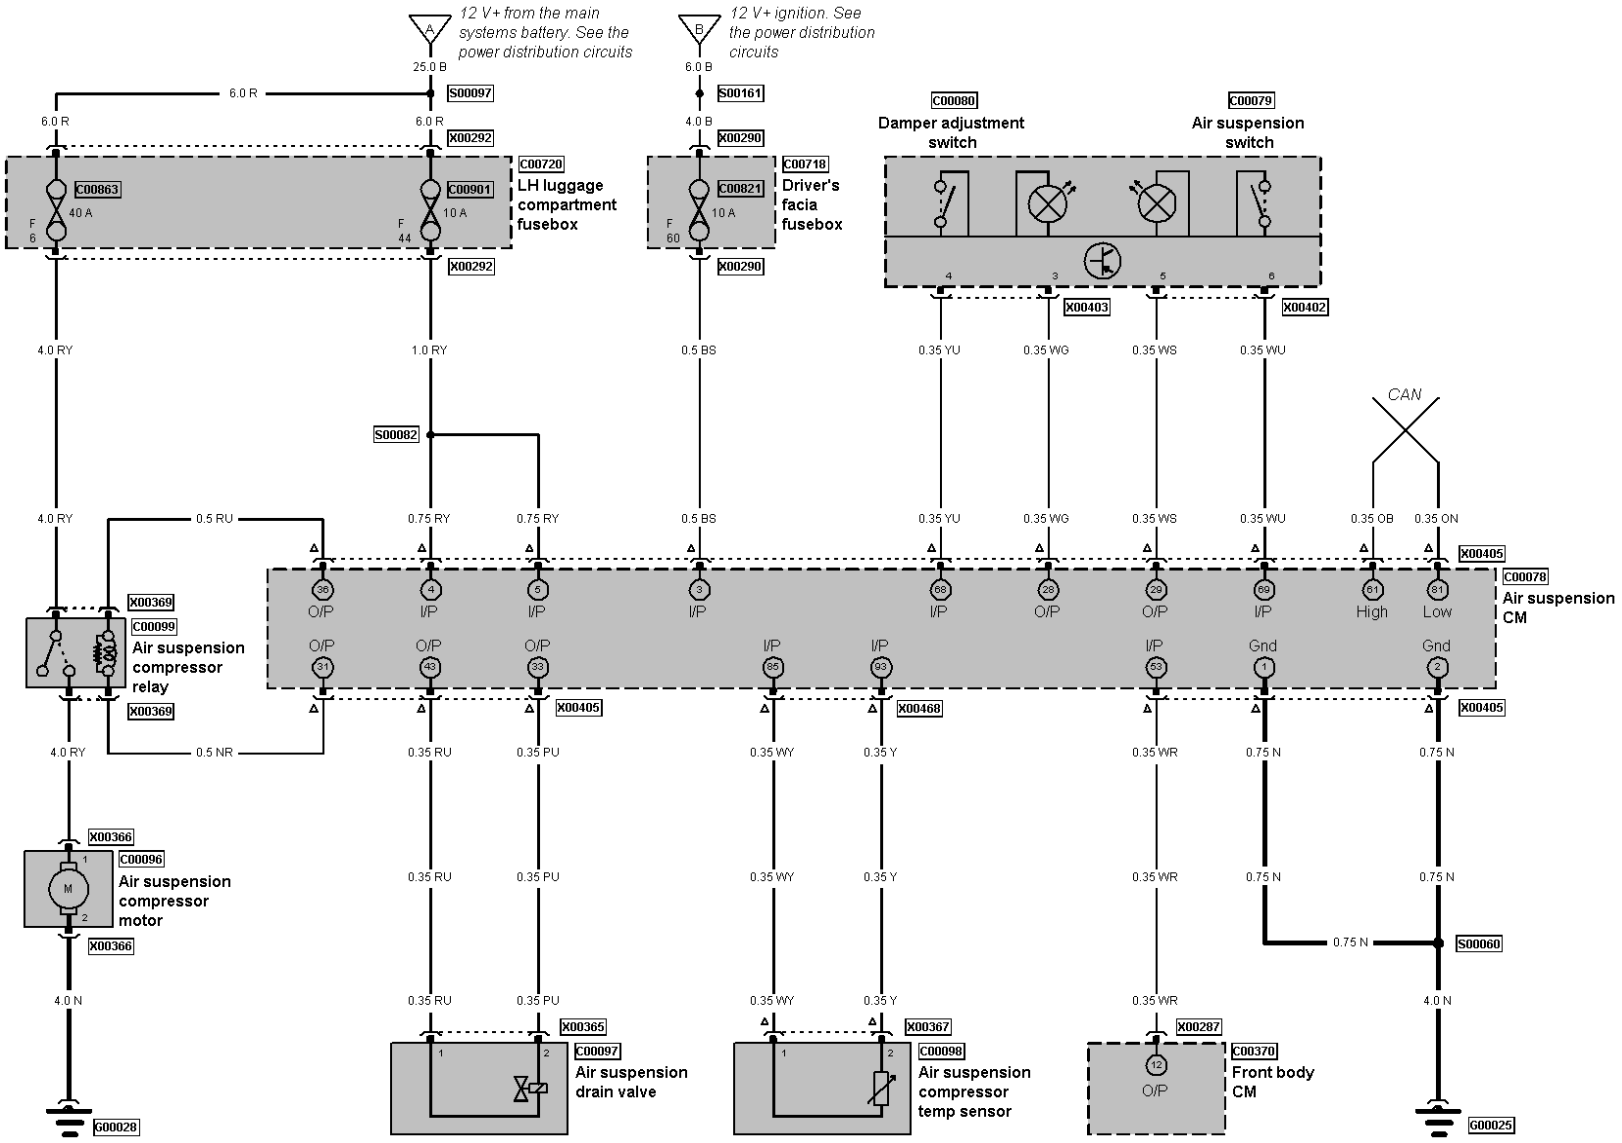
12 V+ from the main systems battery. See the power distribution circuits
12 V+ ignition. See the power distribution circuits
A
B
25.0 B
6.0 B
6.0 R
S00097
S00161
X00292
X00290
C00720
LH luggage compartment fusebox
C00863
40 A
F 6
C00901
10 A
F 44
C00718
Driver's facia fusebox
C00821
10 A
F 60
C00080
Damper adjustment switch
C00079
Air suspension switch
X00403
X00402
4.0 RY
1.0 RY
0.5 BS
0.35 YU
0.35 WG
0.35 WS
0.35 WU
CAN
S00082
0.5 RU
0.75 RY
0.35 OB
0.35 ON
X00405
C00078
Air suspension CM
X00369
C00099
Air suspension compressor relay
O/P
I/P
High
Low
Gnd
0.5 NR
X00468
0.35 RU
0.35 PU
0.35 WY
0.35 Y
0.35 WR
0.75 N
X00366
C00096
Air suspension compressor motor
S00060
4.0 N
G00028
X00365
C00097
Air suspension drain valve
X00367
C00098
Air suspension compressor temp sensor
X00287
C00370
Front body CM
G00025