



8. Disconnect the wiring harness plugs (x2).

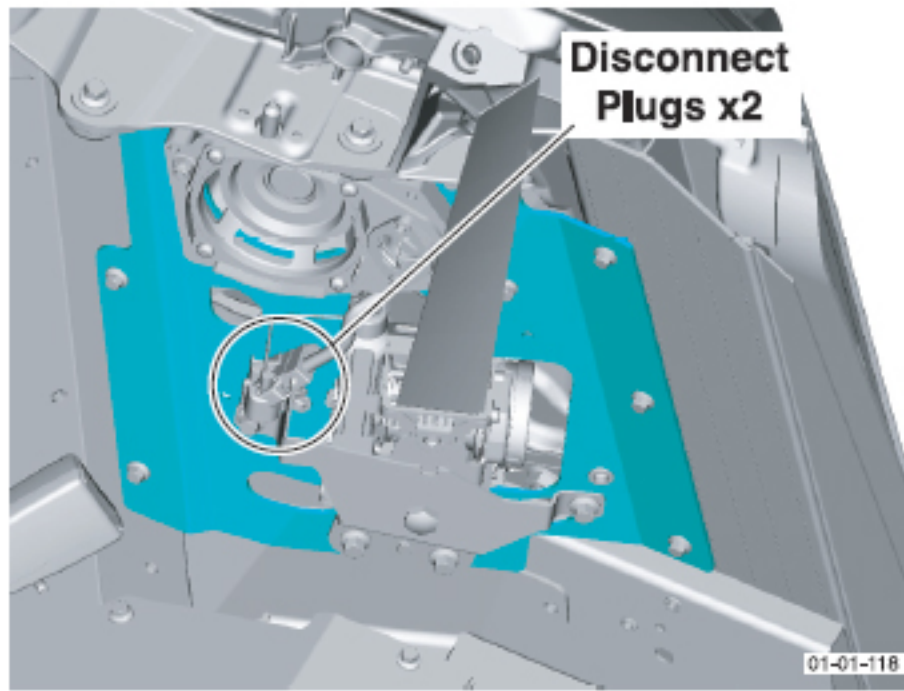


11. Remove the two glass securing screws and withdraw the glass.

Remove Glass
Securing Screws

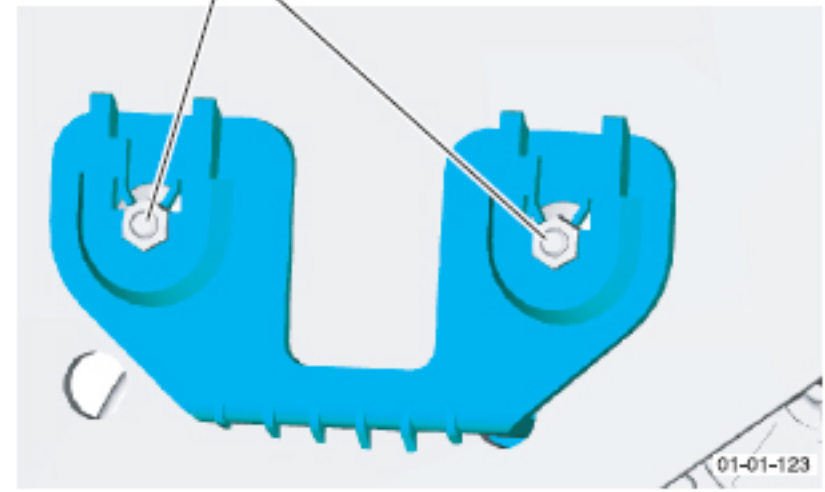


9. Disconnect the glass regulator wiring harness plug.


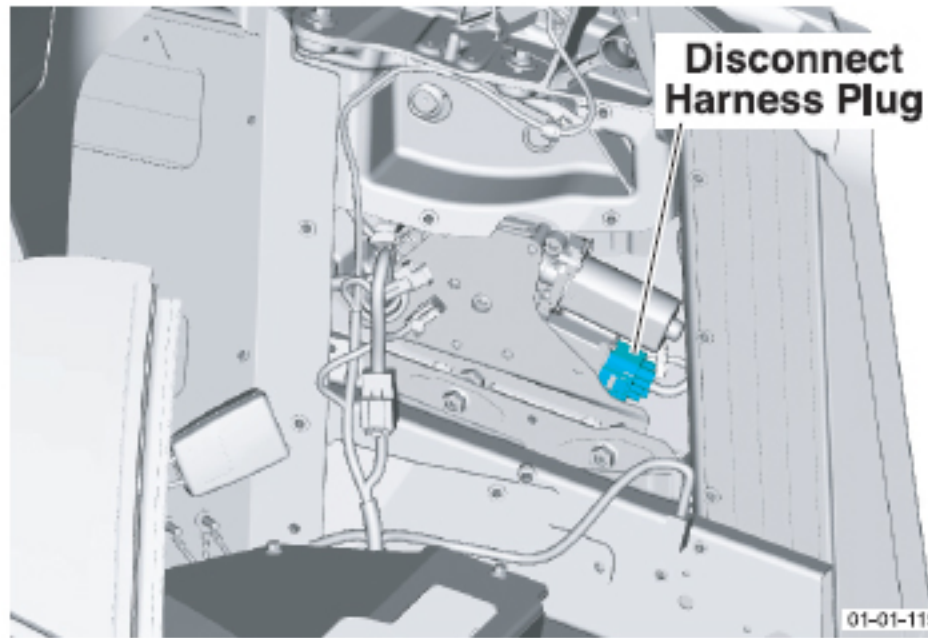


12. Power the glass regulator down.

13. Remove the nuts (x2) that secure the bottom of the glass regulator. Pull the bottom of the glass regulator to reveal bolts (x2). Remove the bolts (x2).

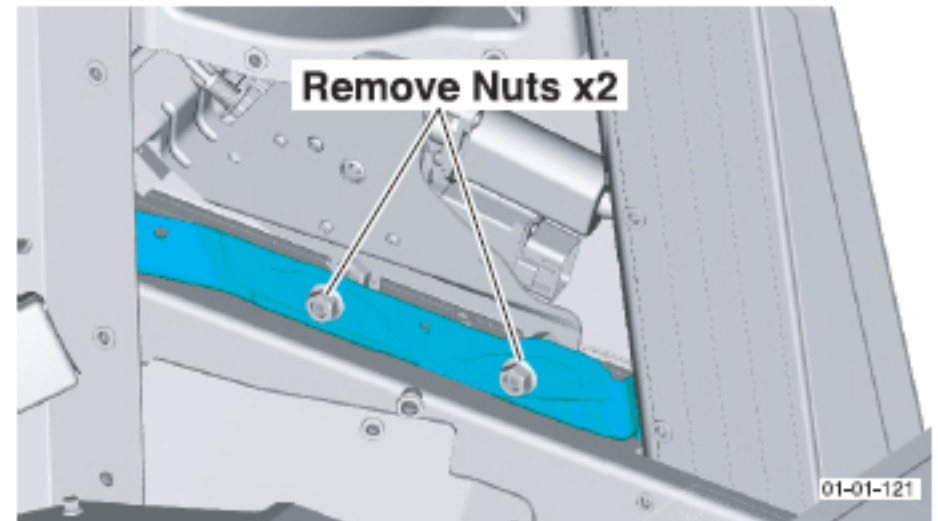

10. Power up the glass regulator to line up the two glass securing screws through the two holes in the top bracket.

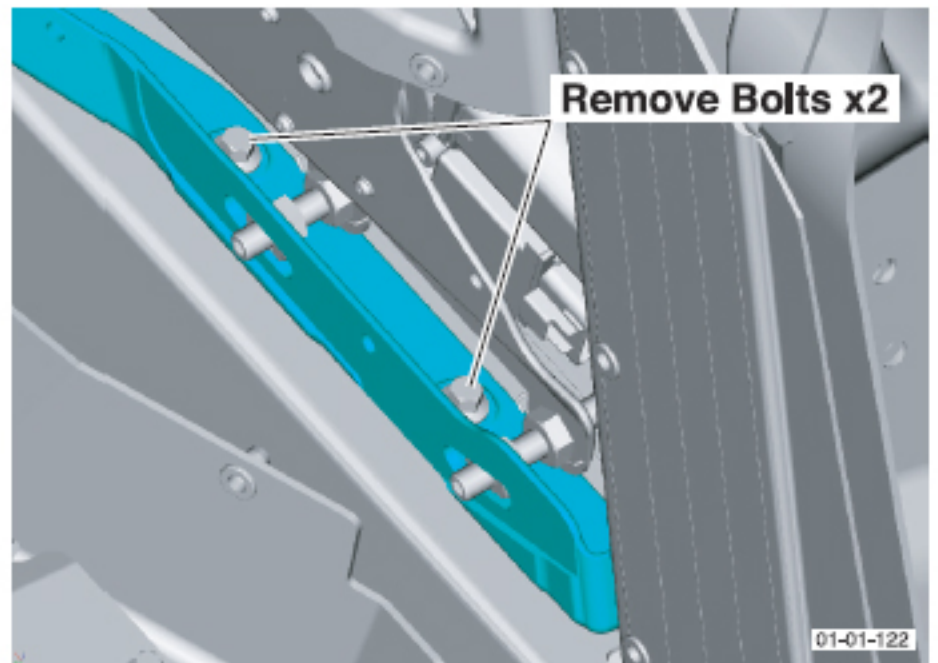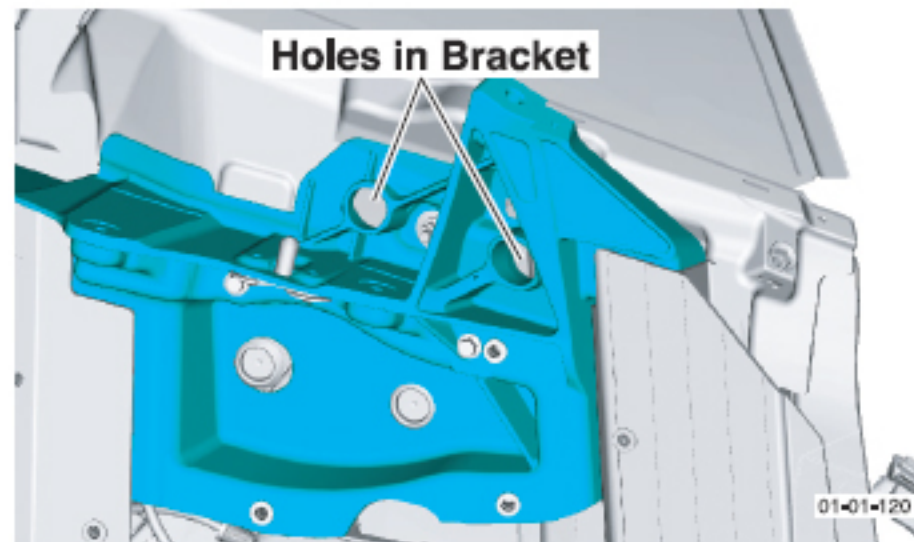

14. Remove the nut from the top of the glass regulator and withdraw the glass regulator.